


NOTES:

1. When required, place topsoil before installing RECP according to Section 624.
2. When required, apply turf establishment according to Section 625.
3. Apply seed and fertilizer as recommended by the manufacturer before placing RECP.




Wood Stakes
1" X 3" stock cut
into triangular shape

Typical staples
No. 11 gauge wire

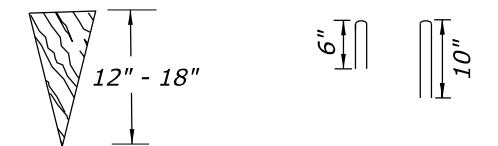

DETAIL A
TYPICAL GROUND FASTENERS

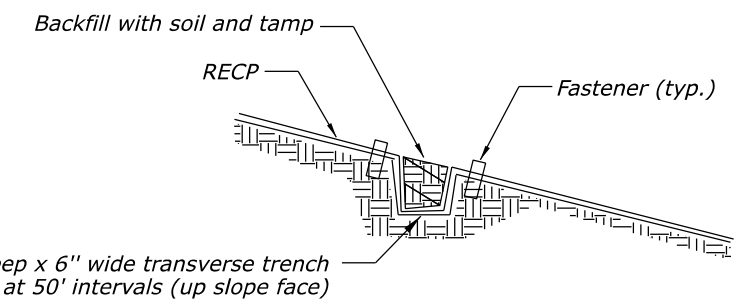

SECTION A-A
EROSION STOP (CHECK SLOT)

INSTALLATION PROCEDURES:

Install Rolled Erosion Control Product (RECP) along the slopes as follows:

- Step 1:** Grade, smooth, and compact slope. Remove rocks, trash, and other material which will prevent the RECP from laying flush with the ground. Do not track slope face.
- Step 2:** Unroll and lay RECP out down slope face (in the direction of flow). Anchor at top of slope. Do not stretch RECP.
- Step 3:** Secure RECP with wood or metal fasteners. See Detail A.

SLOPE STABILIZATION WITH RECP

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY		EFLHD DETAIL E629-01
SLOPE STABILIZATION WITH ROLLED EROSION CONTROL PRODUCT (RECP)		SPECIFICATION FP-24, FP-14
		APPROVED FOR USE 05/2024