



INSTALLATION PROCEDURES

Install Rolled Erosion Control Product (RECP) along the bottom of the channel and up the side slopes as follows:



Step 1: Bury the top end of the RECP mat strip in a trench 6 inches or more deep.

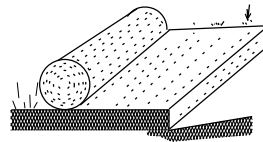

Step 2: Tamp the trench full of soil. Secure with row of fasteners spaced at 6-inch centers and placed 4 inches down from the trench.

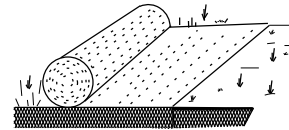


Step 3: Overlap by burying the upper end of lower RECP mat strip as in step 1 and 2. Overlap end of top strip 4 inches and fasten.

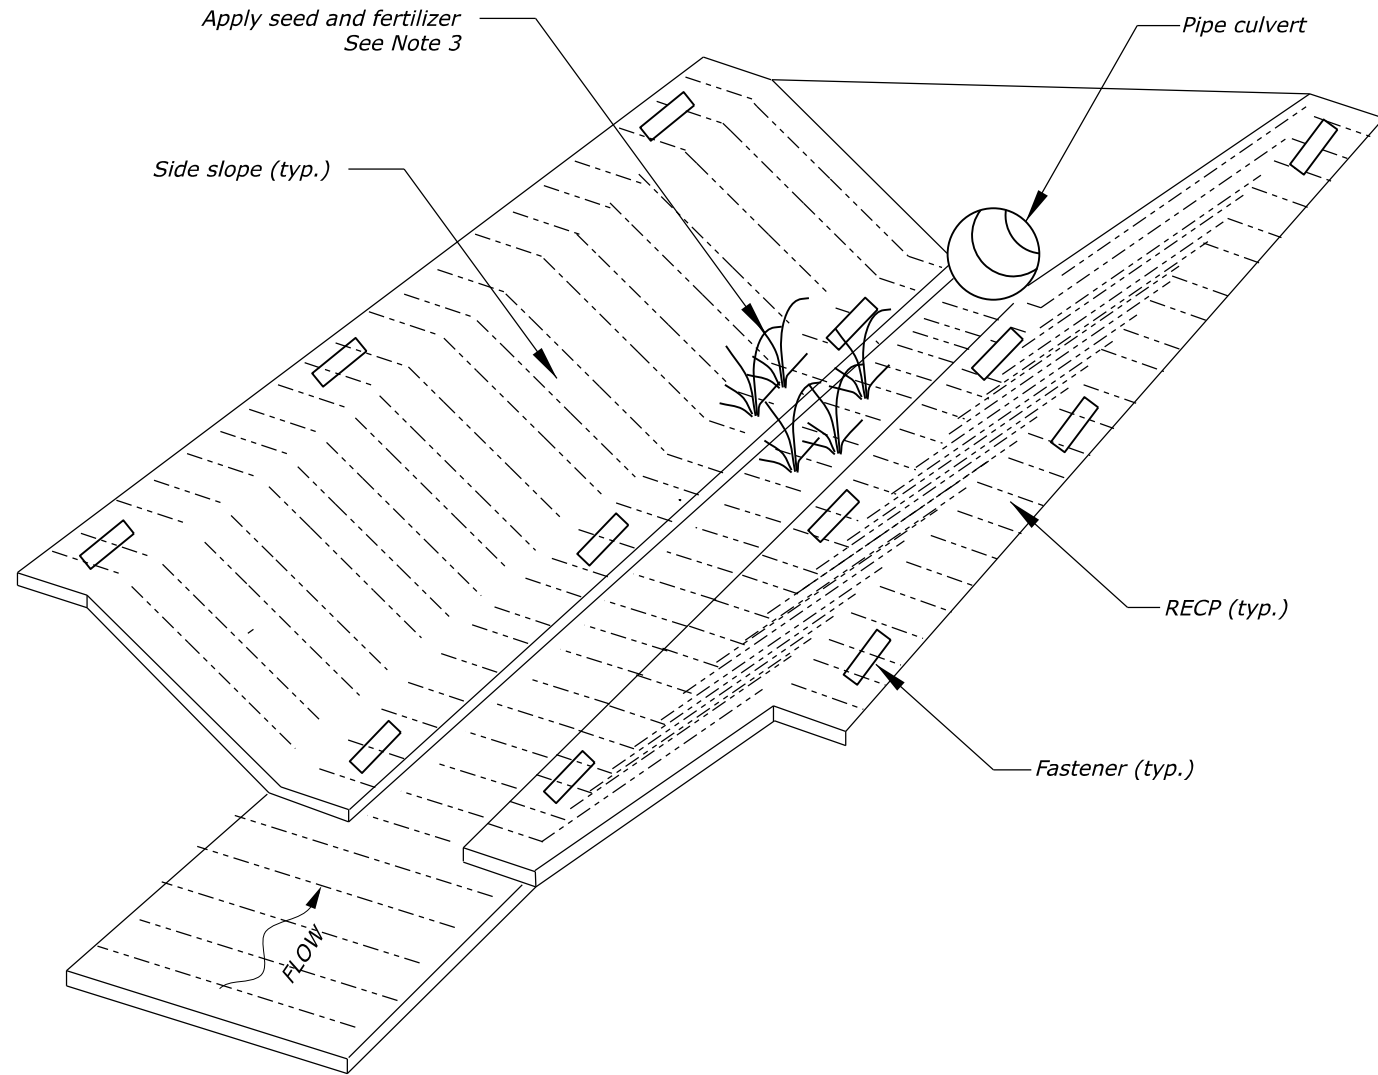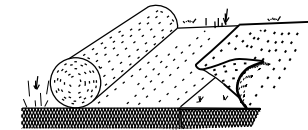


PIPE INLET STABILIZATION WITH RECP

Wood Stakes
1" X 3" stock cut
into triangular shape

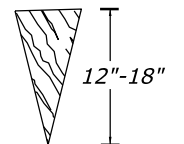

Typical staples
No. 11 gauge wire



DETAIL A
TYPICAL GROUND FASTENERS

NOTES:

1. When required, place topsoil before installing RECP according to Section 624.
2. When required, apply turf establishment according to Section 625.
3. Apply seed and fertilizer as recommended by the manufacturer before placing RECP.

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION, FHWA
OFFICE OF FEDERAL LANDS HIGHWAY

**PIPE INLET STABILIZATION
WITH ROLLED EROSION
CONTROL PRODUCT (RECP)**

EFLHD DETAIL
E629-03

SPECIFICATION
FP-24, FP-14

APPROVED FOR USE
05/2024